

MUSICA™ Technical Bulletin

Programming Macros for *Musica* Keypads

Musica MU4602KP50FM, MU5066KP25S, MU5066KP25, and MU5066KP50 keypads (see Figure 1) have the capability to program two individual macros per input source (eight total macros). These macros can be set on the right and left arrow keys. Each macro is limited to four steps.



MU4602KP50FM

MU5066KP25S

MU5066KP25

MU5066KP50

Figure 1 Musica Keypads

To begin programming:

1. Completely learn the IR codes into all source buttons on all four source pages (on board FM tuner excluded).
2. Select source S1 through S4 to build the macro for that device.
3. Push the menu button and scroll with the right arrow to the **IR location** on menu bar.
4. Scroll with the up arrow to **Macro 1** or **Macro 2**.
5. Scroll with the right arrow to highlight **Start**.
Press a source button! For step 1 displays on the LCD screen.
6. Press the desired source button (0 through 9) for step 1.
7. Press the desired source button (0 through 9) for step 2.
8. Press the desired source button (0 through 9) for step 3.
9. Press the desired source button (0 through 9) for step 4.



The
IP-Based
Distributed
Entertainment
Company.

Products Included:

Musica MU4602

Musica MU5066

MU4602KP50FM

MU5066KP25S

MU5066KP25

MU5066KP50

10. Macros can contain 2, 3, or 4 steps.
11. To exit macro programming mode, push the **menu button** or wait for keypad to time-out and return to the source display.
Time delays can be added to the steps which have been programmed. To do so:
 1. Push the **menu button** and scroll with the right arrow to **IR location** on menu bar.
 2. Scroll with up arrow to **Timing**.
 3. Scroll with right arrow to enter the timing selection window. In this window you may select 500MSEC, 1 SEC, or 2 SEC.
 4. To make a selection, scroll with up arrow or down arrow to highlight the selection needed. This selection is applied to all steps in Macro 1 and Macro 2 for this source. Each source can receive the time delay necessary.
 5. To exit the Timing programming mode, push the menu button or wait for keypad to time-out and return to the source display.